

Technical Information

Item	Specification
Power Supply	230V AC +/- 10%, 50Hz
Power Consumption	0.7W / 6mA to 5W / 40mA
Model	climote HUB
Dimensions	147 x 128 x 40mm
Weight	approx 400g
Operating Temperature	0 to 40 degrees C
Temperature Rating	T40
Zone 1 Relay out	5(2)A
Zone 2 Relay out	5(2)A
Zone 3 Relay out	5(2)A
Unit conforms to	EN 60730-1:2000/A2:2008 & EN 60730-2-7
Mobile Phone conforms to	R&TTE Directive 1999/5/EC
Electric Shock Protection	Class II. The climote HUB is completely protected by its enclosure.

Installation

The **climote** HUB must be fitted by a registered electrical contractor in accordance with the Installation Guide and all applicable local standards. It has no user serviceable parts.

Contents subject to change without notice. Please check our website www.climote.com

climote
Smart Building
Finnabair Industrial Park
Dundalk, Co. Louth
Ireland

Telephone: +353 (0) 42 9395 020
Fax: +353 (0) 42 9394 059
Email: info@climote.ie
Website: www.climote.com

developed by **smarthomes**

climote™

Welcome to your climote remote heating control system. climote is a remotely controlled time-switch that you can operate at any time from a PC, Smartphone or mobile phone, depending where you are. This booklet will help you to use your climote products to keep your home warm and comfortable and save energy at the same time.



developed by **smarthomes**

climote HUB

Display
Shows operational state of the unit

Zone Indicators
Highlighted when zone is enabled
Icons alongside indicator show additional status information

Zone Lamps
Show the status of each zone:

- No colour - Zone off
- Green - Zone using timers
- Orange - Zone Boost on
- Red - Zone always on



Scroll-wheel
Turn to navigate on the screen
Push to select.
Scroll wheel function depends on the current operating mode

Status indicator
Shows the current status of the climote HUB:

- No colour - Unit is off
- Flashing Green - Normal
- Flashing Yellow - Warning
- Flashing Red - Fault

 Display shows more details

Boost Buttons
Enable instant heating for each zone.
Press Zone Boost button to turn on heating in selected zone.
A pop-up menu explains the options

Menu / Back button
Shows currently available menu options or goes back one level

climote ONLINE

Use the menu bar for **Help** and to manage **My Schedules** and other time-switch **Settings**

Heating indicator
lamp shows current heating activity

Press for an immediate **Boost** of up to nine hours.
Enter your boost choices in the drop-down and apply when complete



Press to **Log out**.
You will be automatically logged out after 10 minutes if there is no activity

Dashboard.
Shows the currently programmed heating for all three zones

Status indicator / get status
shows the current status of the climote HUB. Press to get or change status


Select **Edit** to enter Edit mode and change your time-switch control settings

Press **View All** to see your heating timers for all seven days

climote TEXT

Useful Text Message Commands

Boost Living 2	Boost living zone for 2 hours
Boost Bed 1	Boost bed zone for 1 hour
Cancel All Boost	Stop all boosts immediately
Hold Water 2	Suspend water zone for next 2 hours
Cancel Living hold	Reinstate living zone to normal heating schedule
Holiday 8	Turn all zones off for today and next 7 days
Cancel Holiday	Return to normal operations

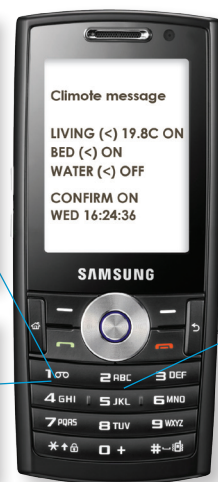

Other Text Commands

Help
Unit replies with some sample text messages

Report
Unit replies with a report on current heating status

Master Text Message Commands

Living Always on	Over-ride living zone to be permanently on
All Always off	Over-ride all zones to be permanently off
All timers on	Reinstate all zones to timer control

developed by smarthomes

climote APP

Use **Menu** to access other functions, including **Holiday** and **Schedules**

Dashboard. Shows the currently programmed heating for all 3 zones

Press for an immediate **Boost** of up to nine hours to one or more heating zones. A single action applies your new Boost choices for all three zones to the climote HUB



Press to **Log out**.
You will stay logged on to the APP until you select Logout.

Press zone dial to enter **Edit** mode and change your climote HUB control settings

Information area

developed by smarthomes